

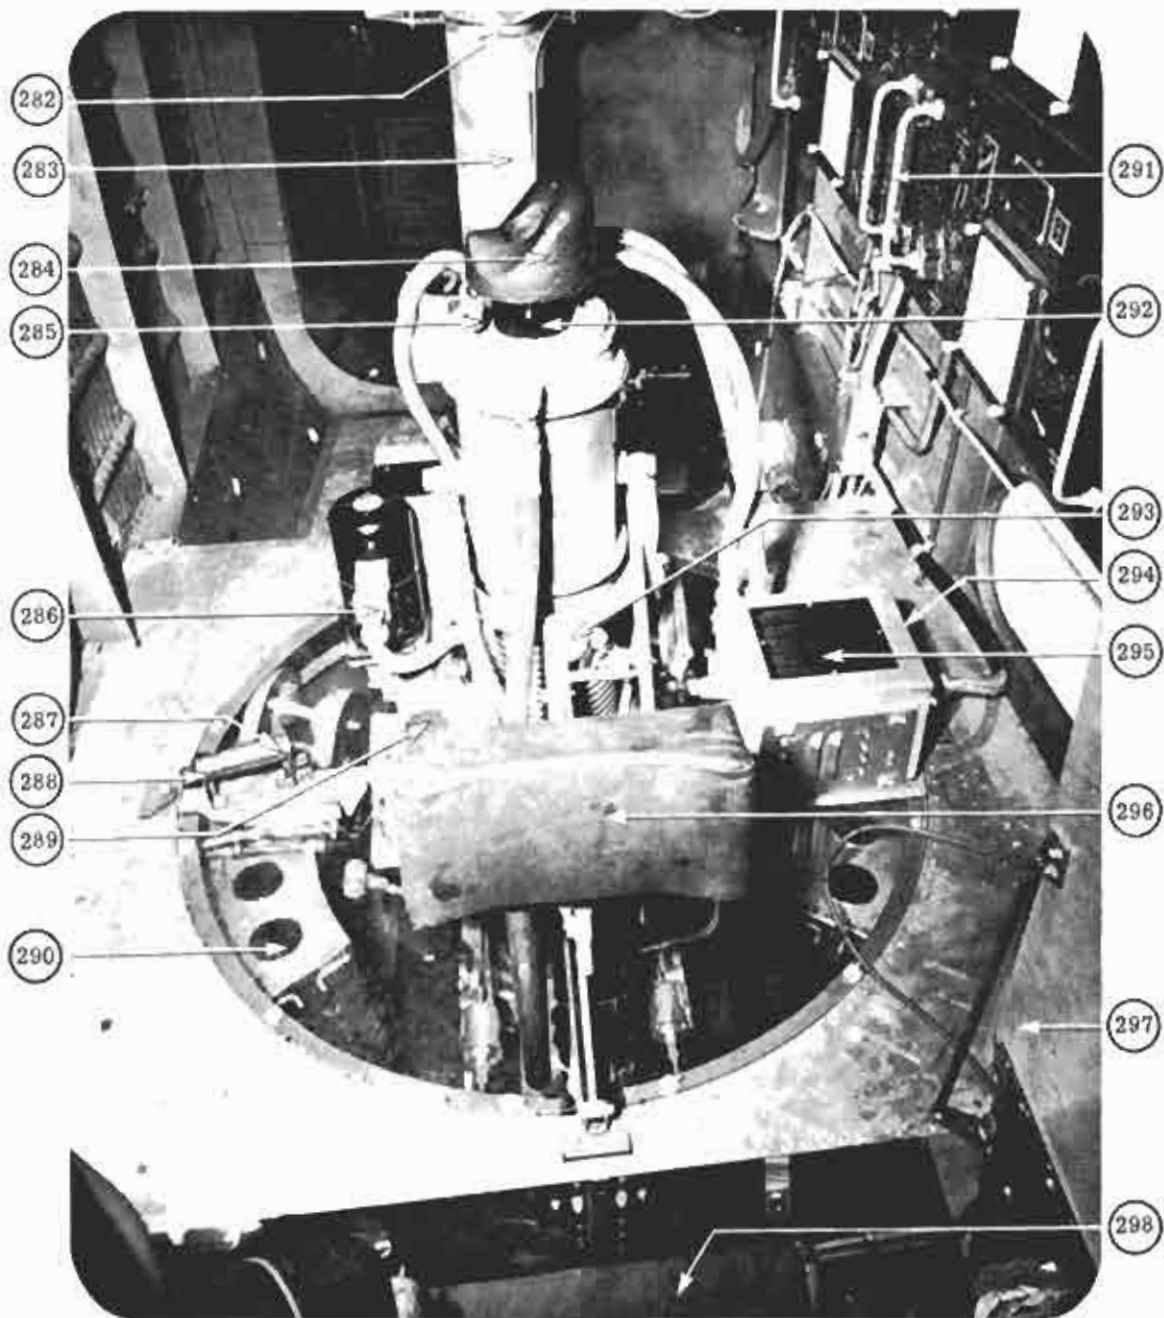


Figure 33 - Lower Gun Turret (Interior View)

- | | | |
|--|---|---|
| 282 Foot Support Adjustment | 288 Steady Grip | 291 Spare Insert Tuning Units for Liaison Transmitter |
| 283 Upper Turret Shaft | 289 Manual Turret Control Shifter Shaft | 292 Gun Sight Adjustment Collar |
| 284 Gun Sight Eye Cushion | 290 Ammunition Box | 293 Crank Handle for Manual Tur- |
| 285 Retract Lever | 291 Spare Insert Tuning Units for Liaison Transmitter | |
| 286 Turret Rotation and Retraction Motor | 292 Gun Sight Adjustment Collar | 294 Turret Disconnect Switch |
| 287 Interphone Button - Inboard End of Steady Grip | 293 Crank Handle for Manual Tur- | 295 Controller Box |
| | | 296 Turret Operator's Chest Support |
| | | 297 Radio Operator's Table |
| | | 298 Turret Operator's Kneeling Pad |